


DECT1015/DECT1015+1

Owner's Manual

What's in the box?

DECT1015

base with cordless handset

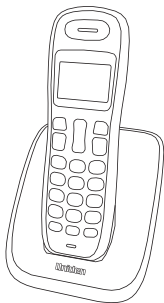

Battery
cover



Not pictured:

- Rechargeable battery (BT-904s)
- AC adapter (AAD-041S(M))
- Telephone cord

You will also find (DECT1015+1 Only):

Accessory handset and charger



Not pictured:

- Rechargeable battery (BT-904s)
- Battery cover
- AC adapter (AAD-600S(M))

- ◆ If any items are missing or damaged, contact your place of purchase immediately. Never use damaged products!
- ◆ Need Help? Get answers at our website: www.uniden.com.au for Australian model or www.uniden.co.nz for New Zealand model.

What's in the manual?

Getting Started	3	Important Information	15
Installing Your Phone	3	Solving Problems	15
Getting to Know Your Phone	4	AC Adapter and Battery	
Using the Menu	7	Information	18
Using Your Phone	9	Mounting the Base unit on	
Basics	9	a Wall	19
Using the Phonebook	11	One Year Limited Warranty	22
Finding a Lost Handset.....	12		
Using Special Features	12		
Chain Dialing	12		
Multihandset Features	13		
Voice Message Notification	14		

Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- ◆ **This unit is NOT waterproof.** DO NOT expose this unit to rain or moisture.
- ◆ Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- ◆ Avoid using a telephone (other than cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- ◆ Do not use the telephone to report a gas leak in the vicinity of the leak.
- ◆ Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- ◆ Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

SAVE THESE INSTRUCTIONS!

CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.


For more details, see the *Important Information* section.

GETTING STARTED

Installing Your Phone

Charge the Battery

1. Unpack all handsets, battery packs, and battery covers. If you need to remove a battery cover, press in on the notch and slide the cover down and off.
2. Line up the battery connector with the jack inside the handset. (The battery connector will only fit one way.)
3. Push the connector in until it clicks into place; tug gently on the wires to make sure the battery pack is securely connected.
4. Replace the battery cover and slide it into place.
5. Connect the AC adapters to the **DC IN 9V** jack on the base (and on the charger for DECT1015+1). Set the plug(s) into the notch(es).
6. Plug the other end of the adapters into standard 240V AC outlets.
7. Place one handset in the base (and the other in the charger for DECT1015+1) with the display(s) facing forward. The display on each handset should light up; if it doesn't, reset the handset or try plugging the AC adapter into a different outlet.

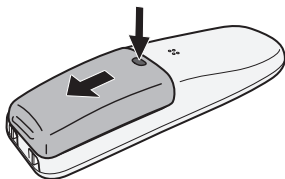

 **Charge all handsets completely (about 15 hours) before using them.**

Connect the Telephone Cord


Use the telephone cord to connect the **TEL LINE** jack on the base to a standard telephone wall jack.

Test the Connection


1. Pick up the handset from the cradle and press **TALK**. You should hear a dial tone, and the display should say *Talk*.
 - ◆ If you don't hear a dial tone or the display says *Check Tel Line*, try checking the connection between the base and the phone jack.
2. Make a quick test call. (Press **END** to hang up.)
 - ◆ If there is a lot of noise, see page 16 for tips on avoiding interference.
3. Test all your handsets the same way. If you can't get a dial tone, try moving the handset closer to the base.

Getting to Know Your Phone

Parts of the Handset

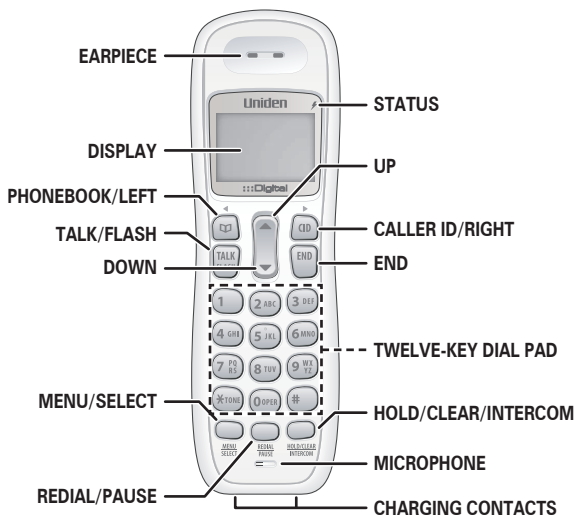

Parts of the Base

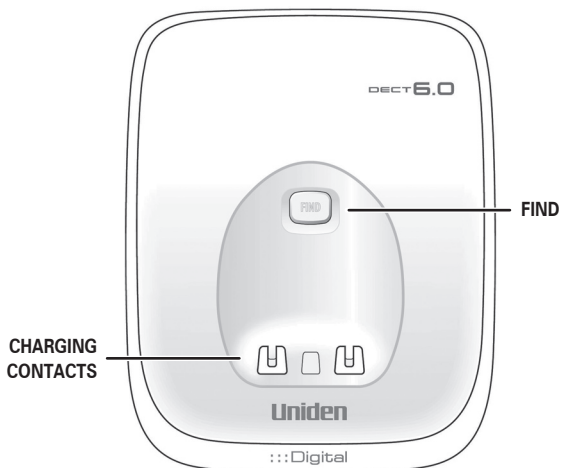

Handset keys/LEDs and how they work

Key (icon)	What it does
HOLD/CLEAR/ INTERCOM	<ul style="list-style-type: none">- In standby: start an intercom call.- During a call: put the call on hold and start a call transfer to another handset.- While entering text: delete one character, or press and hold to delete all the characters.
TALK/FLASH	<ul style="list-style-type: none">- In standby: start a telephone call (get a dial tone).- During a call: switch to a waiting call.
END	<ul style="list-style-type: none">- During a call: hang up.- In the menu or any list: exit and go to standby.







Key (icon)	What it does
MENU/SELECT	<ul style="list-style-type: none"> - In standby: open the menu. - In the menu or any list: select the highlighted item.
UP (▲)	<ul style="list-style-type: none"> - In standby: increase the ringer volume. - During a call: increase the audio volume. - In any menu or list: move the cursor up one line.
DOWN (▼)	<ul style="list-style-type: none"> - In standby: decrease the ringer volume. - During a call: decrease the audio volume. - In any menu or list: move the cursor down one line.
PHONEBOOK/ LEFT (📖)	<ul style="list-style-type: none"> - In standby or during a call: open the phonebook. - In the menu: go back to the previous screen. - During text entry: move the cursor to the left.
CALLER ID/ RIGHT (📞ID)	<ul style="list-style-type: none"> - In standby or during a call: open the Caller ID list. - During text entry: move the cursor to the right.
REDIAL/ PAUSE	<ul style="list-style-type: none"> - In standby: open the redial list. - While entering a phone number: insert a 2-second pause.
*	- Press and hold to lock or unlock the keypad lock feature.
LED	What it means
STATUS	<ul style="list-style-type: none"> - On: the battery is charging. - Blinking: there are new messages.

Base key and how it works


Key (icon)	What it does
FIND	- In standby: page all handsets.

Reading the Display

This table shows possible status icons and what they mean. Since the icons appear based on what you're doing with the phone, you won't ever see all of these icons at the same time.


Icon	What it means
	The ringer is turned off and will not ring for new calls.
	You have a voice message waiting.
	Privacy Mode is on: no other handset can join the call.
	T-coil mode is on (see page 16).
	The battery is 1) fully charged, 2) half charged, 3) getting low, or 4) empty.
	Enter 1) capital or 2) lower case letters (see page 8).

Using the Menu




To open the menu, press **MENU/SELECT**.

Press **MENU/SELECT** to choose the highlighted option.

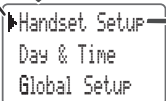


▶ Handset Setup
Day & Time
Global Setup

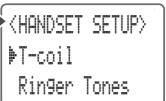


< HANDSET SETUP >
▶ T-coil
Ringer Tones

The cursor shows the highlighted option. To move the cursor, use **UP & DOWN**.



To go back a screen, press **PHONEBOOK/LEFT**

OR press **END** to exit the menu.



- ◆ If you open the menu during a call, use **LEFT** to back out of the menu without hanging up.
- ◆ If you don't press any keys for about thirty seconds, the handset exits the menu

Handset Setup **Menu**

You can change these settings separately for each handset.

<i>T-coil</i>	Turn on T-coil mode to reduce noise on some hearing aids (for more details, see page 16).
<i>Ringer Tones</i>	Choose this handset's ring tone. As you highlight each ring tone, the phone plays a sample. When you hear the tone you want, press MENU/SELECT .
<i>AutoTalk</i>	Have this handset answer a call when you pick it up from the cradle (without pressing any buttons).
<i>Any Key Answer</i>	Have this handset answer a call when you press any key on the 12-key dialpad.
<i>Banner</i>	Change the name used on the handset's display.
<i>Key Touch Tone</i>	Have the keypad sound a tone when you press a key.

Day & Time **Menu**

Use this menu to set the clock manually. (If you have Caller ID, the phone sets the day and time from the CID data.) Select the day of week, then use the number keypad to enter the hour and minutes in HHMM format (e.g., enter 0345 for 3:45). Then, select AM or PM.

Global Setup **Menu**

The settings on this menu affect all handsets. Only one handset at a time can change these menu options.

<i>Insert 0</i>	Adds "0" or "00" to the beginning of the number received from Caller ID. The default setting is ON for New Zealand and OFF for Australia.
<i>VMWI Reset</i>	Reset your Visual Message Waiting Indicator to bring it back in sync with your voice mail service.

Entering Text on Your Phone

Use the 12-key dial pad when you want to enter text into your phone (a name in the phonebook, the handset banner, etc.).

- ◆ The phone defaults to a capital letter for the first letter and any letter after a space; otherwise, it uses small letters.

- ◆ To switch to all capital letters, press *****. The phone defaults to all capital letters first (e. g. ABCabc2) until you enter a blank space or press ***** again. (Any time you want to change case, just press *****.)
- ◆ If two letters in a row use the same number key, enter the first letter and wait a few seconds (or press **RIGHT**); the cursor will move to the next space. Enter the next letter.
- ◆ Press **#** to enter a blank space.
- ◆ To change a letter, move the cursor to that letter and press **CLEAR** to erase the letter. Then, enter the new one.
- ◆ To erase the entire entry, press and hold **CLEAR**.
- ◆ Press **0** to cycle through all available symbols and punctuation.

USING YOUR PHONE

Basics

To...	Handset
make a call	Dial the number, then press TALK/FLASH .
answer a call	Press TALK/FLASH .
hang up	Press END or put the handset in the cradle.
put a call on hold	Press HOLD/CLEAR/INTERCOM . After 5 minutes on hold, the call will be disconnected.
return to a call on hold	Press TALK/FLASH .
mute the ringer for this call only	While the phone is ringing, press END .

Changing the Volume

You can set the earpiece volume on each handset. Anytime you are listening to the earpiece, press **UP** to increase the volume and **DOWN** to decrease it.

You can also set the ringer volume separately: when the phone is in standby, press **UP** to increase the ringer volume and **DOWN** to decrease. If you turn the ringer volume all the way down, the ringer turns off.

Using the Caller ID and Redial Lists

Caller ID (CID) is a service available from your telephone provider that shows the phone number (and sometimes the caller's name) of incoming calls. Contact your telephone provider for more information.

Caller ID list	Redial list
<ul style="list-style-type: none">- When a call comes in, the phone displays the number and name (if available) of the caller.- The phone saves the information for the last 30 received calls to the <i>CID list</i>.- When it's in standby, the handset shows how many calls came in since the last time you checked the CID list.	<ul style="list-style-type: none">- Each handset remembers the last 5 numbers you dialed on it. The redial list is separate for each handset.

 **All handsets share the CID list; only one handset can access the CID list at a time.**

To...	Follow these steps:
Open the CID list	Press CALLER ID/RIGHT .
Open the redial list	REDIAL/PAUSE .
Scroll through the lists	Press DOWN to scroll from newest to oldest. Press UP to scroll from oldest to newest.
Dial a number from the lists	Highlight the number you want and press TALK/FLASH .
Close the lists	Press PHONEBOOK/LEFT .

To select a number, highlight the number and press **MENU/SELECT**. The phone gives you the following options:

<i>Delete Entry</i>	Erase the number from the list.
<i>Store Into Pb</i>	Add the number to the phonebook. The handset prompts you to edit the name and number.
<i>Delete All</i>	(CID list only) Erase all numbers from the list.

Using Call Waiting

Call Waiting, a service available from your telephone provider, lets you receive calls while you are on another call. Caller ID on Call Waiting (CIDCW) service displays Caller ID information for a waiting call.

If you get a Call Waiting call, the phone sounds a tone and displays any CID information received from the waiting call.

For Australian model:

Press **TALK/FLASH** and then press **2** to accept the waiting call. The first caller is put on hold, and you will hear the new caller after a short pause. To return to the original caller, press **TALK/FLASH** and then **2** again.

For New Zealand model:

Press **TALK/FLASH** on the handset to accept the waiting call. The first caller is put on hold, and you will hear the new caller after a short pause. To return to the original caller, press **TALK/FLASH** again.

Using the Phonebook

The phone can store up to 30 entries in its phonebook. All handsets share the same phonebook, so only one handset may access the phonebook at a time.

To...	Press...
Open/close the phonebook	PHONEBOOK/LEFT.
Scroll through the entries	DOWN (to scroll through the phonebook from A to Z) or UP (to scroll from Z to A).
Jump to entries that start with a certain letter	the number key corresponding to the letter you want to jump to.
Dial an entry	UP or DOWN to find the entry you want to dial, then press TALK/FLASH .

Phonebook Menu Options

Open the phonebook with the phone in standby, then press **MENU/SELECT** to open the phonebook menu. Choose one of these options:

Create New	Add an entry to your phonebook. The phone prompts you to enter a name and number.
Delete All	Erase all the entries in the phonebook.

- ◆ If you need the phone to pause before sending the next set of digits, press **REDIAL/PAUSE** to insert a 2-second pause. The pause shows as a **P** in the display.
- ◆ You can insert as many pauses as you need, but each pause counts as one of your 20 digits.

Phonebook Entry Options

With the phone in standby, open the phonebook and find the entry you want. Press **MENU/SELECT** to open the individual phonebook entry menu. The phone prompts you to edit or delete the entry.

Finding a Lost Handset

With the phone in standby, press **FIND** on the base. All the handsets will beep for 1 minute or until you press **FIND** again. You can also end the page by pressing any key from the found handset.

USING SPECIAL FEATURES

Chain Dialing

If you often have to enter a series of digits or a code number during a call, you can save that code number to a phonebook entry and use the phonebook to send the code number.

1. Enter the code number (up to 20 digits) into the phonebook just like a regular phonebook entry. Be sure to enter the code number into the phonebook exactly as you would enter it during a call.

2. When you hear the prompt that tells you to enter the number, open the phonebook and find the entry that contains your code number. Press **MENU/SELECT**; the phone transmits the code number entered in the previous step. If you change your mind, use **PHONEBOOK/LEFT** to close the phonebook.

Multihandset Features (DECT1015+1 Only)


Conference Calling

When an outside call comes in, two handsets can join in a conference call with the outside caller.

- ◆ To join the call, just press **TALK/FLASH**.
- ◆ To leave the conference call, hang up normally; the other handset remains connected to the call.

Privacy Mode

To prevent other handsets from joining a call:

1. Start your call as usual, then press **MENU/SELECT**. The display shows *Call Privacy*.
2. Press **MENU/SELECT** again to turn privacy mode on (you'll see a  in the display).
 - ◆ Privacy mode turns off automatically when you hang up.
 - ◆ As long as you have privacy mode on, no other handsets can interrupt your call. To accept another handset in the call, turn privacy mode off by repeating the process above (press **MENU/SELECT** twice).

Intercom

- ◆ Whenever the phone is in standby, you can make an intercom call between handsets without using the phone line.
- ◆ You can make an intercom call from any handset, but only two handsets can be in an intercom call at any time.
- ◆ If an outside call comes in during an intercom page, the phone cancels the page so you can answer the incoming call.
- ◆ If an outside call comes in during an intercom call, press **TALK/FLASH** to hang up the intercom call and answer the outside call.

To...	Follow these steps:
make an intercom page	<ol style="list-style-type: none"> 1. Press HOLD/CLEAR/INTERCOM. 2. Select the handset you want to talk with, or <i>All</i> to page all handsets at the same time.
cancel a page	Press END .
answer an intercom page	Press HOLD/CLEAR/INTERCOM or TALK/FLASH .
end an intercom call	Press END . Both handsets return to standby.

Call Transfer

To...	Follow these steps:
transfer a call	<ol style="list-style-type: none"> 1. Press HOLD/CLEAR/INTERCOM to put the call on hold. 2. Select the handset you want to page (select <i>All</i> to page all handsets at the same time). 3. When another handset accepts the call, you'll be disconnected (press TALK/FLASH to rejoin the call).
cancel a transfer	Press TALK/FLASH to return to the call.
accept a transferred call	<ol style="list-style-type: none"> 1. To answer the page and speak to the transferring handset using the intercom, press HOLD/CLEAR/INTERCOM. 2. To speak to the outside caller, press TALK/FLASH.

Voice Message Notification

- ◆ If you subscribe to a voice mail service, your phone can notify you when you have a new message waiting. This feature supports Frequency-Shift Keying (FSK) message notification. Contact your voice mail provider for information.
- ◆ When you have new messages, the voice message icon appears in the display, and the **STATUS** light on the handset blinks.
- ◆ After you listen to your messages, the voice message icon turns off. If it doesn't, you can reset it: With the phone in standby, open the menu and select *Global Setup*; select *VMWI Reset*, then select *Yes*.

IMPORTANT INFORMATION

Solving Problems

If you have any trouble with your phone, try these simple steps first. If you need help, visit our website listed on the front cover.

If...	Try...
No handsets can make or receive calls.	<ul style="list-style-type: none">- Checking the telephone cord connection.- Disconnecting the base AC adapter. Wait a few minutes, then reconnect it.- Making sure the base is plugged in.
A handset can't make or receive calls.	<ul style="list-style-type: none">- Moving the handset closer to the base.
A handset can make calls, but it won't ring.	<ul style="list-style-type: none">- Making sure the ringer is turned on.
A handset is not working.	<ul style="list-style-type: none">- Charging the battery for 15-20 hours.- Checking the battery connection.
A handset says <i>Unavailable</i> .	<ul style="list-style-type: none">- Moving the handset closer to the base.- Seeing if another handset is in Privacy Mode.
No handsets display Caller ID information.	<ul style="list-style-type: none">- Letting calls ring twice before answering.- Making sure your Caller ID service is active.
I can't transfer calls. (DECT 1015+1 Only)	<ul style="list-style-type: none">- You may have to reset the handset. Contact Customer Service for instructions.
Two handsets can't talk to the caller. (DECT 1015+1 Only)	<ul style="list-style-type: none">- Making sure no handset is in Privacy Mode.

Weak or Hard To Hear Audio

If a caller's voice sounds weak or soft, the signal might be blocked by large metal objects or walls; you might also be too far from the base, or the handset's battery may be weak.

- ◆ Try moving around while you're on a call or moving closer to the base to see if the sound gets louder.
- ◆ Make sure the handset's battery is fully charged.
- ◆ Try adjusting the earpiece volume.

Noise or Static on the Line

Interference is the most common cause of noise or static on a cordless phone. Here are some common sources of interference:

- ◆ electrical appliances, especially microwave ovens
- ◆ computer equipment, especially wireless LAN equipment and DSL modems
- ◆ radio-based wireless devices, such as room monitors, wireless controllers, or wireless headphones or speakers
- ◆ fluorescent light fixtures (especially if giving off a buzzing noise)
- ◆ other services that use your phone line, like alarm systems, intercom systems, or broadband Internet service

Do you use a T-Coil hearing aid?

- If you have a hearing aid equipped with a telecoil (T-coil) feature, the interaction between the hearing aid & digital cordless phones can cause noise in the handset. If you have a T-coil hearing aid & you have problems with noise on the line, try turning on *T-coil* mode. Open the menu. Select *Handset Setup*, then select *T-coil*.
- Using T-coil mode can shorten the handset's talk time; make sure to watch the battery status and keep the battery charged.

If static is on 1 handset or in 1 location:	If static is on all handsets or in all locations:
<ul style="list-style-type: none">- Check nearby for one of the common interference sources.- Try moving the handset away from a suspected source, or try moving the suspected source so it's not between the handset and the base.- There is always more noise at the edges of the base's range. If an <i>Out of Range</i> message displays, try moving closer to the base.	<ul style="list-style-type: none">- Check near the base for the source of interference.- Try moving the base away from a suspected source, or turn off the source if possible.- If the base has an adjustable antenna, try raising the antenna so it stands straight up.- If you have any service that uses the phone line, you might need a filter (see below).

Installing a Line Filter or DSL Filter

Sometimes, broadband Internet services that use the telephone line can interfere with phones. One of these services—DSL—often causes static on telephones. A DSL filter or telephone line filter usually solves this problem. The technician who installed your DSL service might have left some filters for you; if not, call your DSL provider or look in any electronics store.

Plug the DSL filter into the telephone wall jack and plug your phone's base into the filter. Make a test call to make sure the noise is gone.

Liquid Damage

Moisture and liquid can damage your cordless phone.

- ◆ If the exterior housing of the handset or base is exposed to moisture or liquid, wipe off the liquid, and use as normal.
- ◆ If moisture or liquid is inside the plastic housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base), follow these steps:

Handset	Base
<ol style="list-style-type: none">1. Remove the battery cover and disconnect the battery.2. Let dry for at least 3 days with the battery disconnected and the cover off for ventilation.3. After the handset dries, reconnect the battery and replace the cover. Recharge the battery fully (15-20 hours) before using.	<ol style="list-style-type: none">1. Disconnect the AC adapter to cut off the power.2. Disconnect the telephone cord.3. Let dry for at least 3 days before reconnecting.

CAUTION! DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.

AC Adapter and Battery Information

- Use only the supplied AC adapters. Be sure to use the proper adapter for the base & any chargers.
- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- Do not place the unit in direct sunlight or subject it to high temperatures.
- Fully charged, the battery should provide about 10 hours of talk time and about 7 days of standby time. For best results, return the handset to the cradle after each call to keep it fully charged.
- When the battery gets too low, the handset shows a low battery alert. If you hear a strange beep during a call, check the display: if you see the low battery alert, finish your conversation as quickly as possible and return the handset to the cradle. If the handset is in standby, none of the keys will operate.
- With normal use, the battery should last about one year. Replace the battery when the talk time becomes short even when the battery is charged. To buy a replacement battery, visit our website listed on the front cover.

AC adapter		Base/Charger
	Part number	AAD-041S(M) / AAD-600S(M)
	Input voltage	240V AC, 50 Hz
	Output voltage	9V DC @350mA / 9V DC @210mA
Battery pack	Part number	BT-904s
	Capacity	500mAh, 2.4V DC

Rechargeable Nickel-Cadmium Battery Warning


- This equipment contains a rechargeable Nickel-Cadmium (Ni-Cd) battery.
- Do not short-circuit the battery.
- The rechargeable Ni-Cd batteries contained in this equipment may explode if disposed of in a fire.
- Do not charge the battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause it to explode.


Mounting the Base unit on a Wall

You can mount your base directly to the wall using the horizontally aligned mounting slots at the back of the base unit. Before doing this, consider the following:

- ◆ Avoid electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- ◆ Mount your phone within distance of a working phone jack.
- ◆ Make sure the wall material is capable of supporting the weight of the base and handset.
- ◆ Use screws with anchoring devices suitable for the wall material where the base unit will be placed.

1. Insert two mounting screws into the wall (with their appropriate anchoring device), 60mm apart. **Note the horizontal alignment of the screw holes!** Allow about 2mm between the wall and screwheads for mounting the phone.

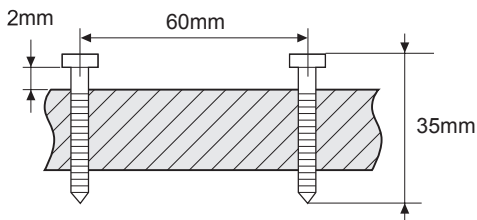

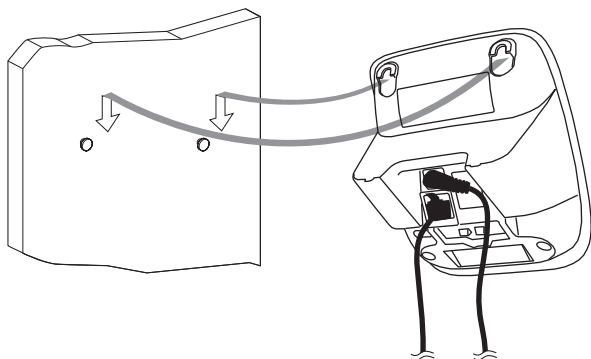

2. Plug the AC adapter into the **DC IN 9V** jack on the telephone and then into a Standard AC wall outlet.
3. Plug the telephone cord into the **TEL LINE** jack on the telephone and then into the telephone socket on the wall.
4. Align the mounting slots on the base with the mounting posts on the wall.
5. Then push in and down until the phone is firmly seated.

Optional Wall Mount Bracket

An optional wall mount bracket can be purchased from our online store to mount the base to a standard wall plate that has vertically aligned mount holes. Visit our website; www.uniden.com.au for Australia or www.uniden.co.nz for New Zealand.

Memo

One Year Limited Warranty

Uniden DECT1015 / DECT1015+1 Cordless Phone



Please keep your sales docket as it provides evidence of warranty.

Important: Evidence of original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited A.B.N. 58 001 865 498
Uniden New Zealand Limited

Warranty is only valid in the original country of purchase.

ELEMENT OF WARRANTY: Uniden warrants to the original retail owner for the duration of this warranty, its DECT1015/DECT1015+1 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original retail owner only, shall terminate and be of no further effect ONE (1) year after the date of original retail sale. This warranty will be deemed invalid if the product is;

- (A) Damaged or not maintained as reasonable and necessary,
- (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,
- (C) Improperly installed,
- (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty,
- (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, or
- (F) Where the Serial Number label of the product has been removed or damaged beyond recognition.

Warranty only valid in the country of original retail/sale.

PARTS COVERED: This warranty covers for one (1) year, the Product and included accessories.

STATEMENT OF REMEDY: In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the Product and return it to you without charge for parts or service. This warranty does not provide for reimbursement or payment of incidental or consequential damages.

This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY: In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (e.g. a copy of the sales docket), to the warrantor at:

**UNIDEN AUSTRALIA PTY
LIMITED**

Service Division
345 Princes Highway,
Rockdale, NSW 2216
Fax (02) 9599 3278
www.uniden.com.au

**UNIDEN NEW ZEALAND
LIMITED**

Service Division
150 Harris Road,
East Tamaki, Manukau 2013
Fax (09) 274 4253
www.uniden.co.nz

THANK YOU FOR BUYING A UNIDEN PRODUCT.

Uniden®

© 2010 Uniden Australia Pty Limited. Uniden New Zealand Ltd. Printed in Vietnam.
UNZZ01124ZZ(0)